

STIRLING®

Designer Collection





Burr Coffee Grinder

Model Number CFG160

INSTRUCTION MANUAL

AFTER SALES SUPPORT

  1300 886 649

 info@tempo.org

MODEL: CFG160 PRODUCT CODE: 700707 03/2020



Welcome

Congratulations on choosing to buy a STIRLING® product.

All products brought to you by STIRLING® are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 3 Year Warranty.

We hope you will enjoy using your purchase for many years to come.

Contents

- 02 Welcome**
- 04 Warranty Details**
- 05 General Safety Instructions**
- 08 Product Overview**
- 09 Getting Started**
- 11 Instructions**
- 12 FAQs and Troubleshooting Guide**
- 13 Other Useful Information**
- 15 Repair and Refurbished Goods or Parts Notice**



STIRLING[®]

Designer Collection

Burr Coffee Grinder

Warranty Details

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/ TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 36 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and to compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



General Safety Instructions

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Keep the manual in a safe place for future reference, along with the completed warranty card, purchase receipt and carton. If applicable, pass these instructions on to the next owner of the appliance.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

Electrical safety and cord handling

- **Voltage:** Make sure your outlet voltage and circuit frequency correspond to the voltage stated on the rating label before connecting the appliance to power.
- **WARNING: Do not immerse!** To protect against fire and electric shock, never immerse the cord, plug or the appliance itself in water or other liquid, or expose any of the electrical connections to water. Only wipe the appliance with a damp cloth, if required.

If the appliance falls into or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water! Do not use this appliance after it has fallen into or has become immersed in water. Contact our after sales support centre for examination and repair.

- **Protect the cord:** Do not kink, bend or damage the power cord and protect it from sharp edges and heat. Do not let the cord hang over the edge of a table or benchtop. Do not let it touch hot surfaces. Ensure the cord is fully extended before use and arrange it in such a way that there will be no risk of anyone pulling it inadvertently or tripping over it. Never move, or carry the product by the cord.
- **No extension cord, no timer:** Do not use the appliance with an extension cord, plug adaptor, external timer or a separate remote control system.
- **WARNING: Do not use if damaged!** Do not pick up or operate the appliance if the power supply cord, plug or housing is damaged. Do not use the appliance after it malfunctions or has been damaged in any manner.
- **Damaged cord:** Check the power cord regularly for visible damage. A damaged cord or plug must be replaced by appropriately qualified personnel in order to avoid a hazard.
- **Disconnect:** Switch off and unplug the appliance from the power outlet when not in use, before assembling or disassembling parts and before cleaning. Grip the plug when disconnecting, do not pull on the cord.

General Safety Instructions (Cont.)

- **RCD:** Unless your home is already fitted with a residual current device (safety switch), we recommend installing an RCD with a rated residual operating current not exceeding 30mA to provide additional safety protection when using electrical appliances. See your electrician for professional advice.

Usage conditions and restrictions

- **Domestic use only:** This appliance is intended for private household use only. It is not intended for commercial or trade use. Do not use it outdoors.
- **Intended purpose:** Do not use the appliance for anything other than its intended purpose, and only use it as described in this manual. Any other use and misuse may cause fire or electric shock, or result in potential injury to persons.
- **Accessories:** Do not use this appliance with accessories that are not supplied. Improper installation and the use of accessory attachments not supplied may result in fire, electric shock or personal injury, and will void your warranty.
- **Usage restriction:** The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Children:** Supervise children to ensure they do not play with the appliance. Close supervision is necessary when any appliance is used by or near children. Cleaning and user maintenance shall not be made by children without supervision.
- **WARNING: Do not leave the appliance unattended** while in use or when plugged in. Disconnect it from the power supply when you are finished with it.
- **Work surface:** To ensure efficient operation, always place the appliance on a level and stable work surface, in a dry environment, away from water and close to a power outlet. Do not operate it on an inclined plane.
- **Do not use the appliance:** near an open flame, hot surface, radiant cooking element or other source of heat. Do not use when empty.
- **Check before use:** Always check the hopper for the presence of foreign objects.
- **Moving parts:** Always switch off the grinder and wait until all parts have stopped moving before moving the appliance.
- **WARNING!** To reduce the risk of severe injury to persons or damage to the appliance, keep hands and utensils out of the coffee bean hopper while grinding, and when the appliance is plugged in.

General Safety Instructions (Cont.)

- **Lid:** For your personal safety and to avoid creating a mess, only use the grinder with both lids securely in place. The grinder will not work if the ground coffee container is not covered by the lid.
- **Maximum usage time:** Do not use the coffee grinder continuously for more than five (5) minutes at a time as the motor could overheat and cause damage to the appliance. Allow the appliance to rest until the motor has cooled down.
- **Cleaning:** Make sure the appliance is unplugged from the power supply before cleaning. Do not use abrasive or alkaline cleaning agents.
Only the plastic removable parts (bean hopper and lid, ground coffee container and lid) may be washed in warm, soapy water, then rinsed and dried thoroughly. Use a dry brush to remove coffee remnants from around the outer and inner burrs in the grinding chamber.
Do not to immerse the appliance in water or other liquid, or wash it under running water.
- **Misuse:** We assume no liability for any eventual damages or injury caused by improper use, inappropriate handling or noncompliance with these instructions.

Product Overview

Scope of delivery



Coffee grinder

- 1 Coffee bean hopper lid
- 2 Coffee bean hopper
- 3 Grind selector ring (coarse <---> fine)
- 4 Cup dial
- 5 Ground coffee container lid
- 6 Ground coffee container
- 7 RELEASE button (hopper)

- 8 START/STOP ► button
- 9 Ground coffee chute
- 10 Base

- B Other inclusions** (not pictured)
- Cleaning brush
 - Instruction manual
 - Quick start guide
 - Warranty certificate

NOTE: Due to continued product improvement, images and illustrations in this manual may vary slightly from the product purchased. All images in this manual are for reference purposes only. Parts are not necessarily pictured to scale.


Getting Started

Before first use



- **Unpack the appliance** and keep the original packaging materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event that the carton is to be disposed of, please recycle it where possible. Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- **Inspect the cord and plug** for damage or wear before each use. Do not use the appliance if the appliance or its cord has been damaged or is not working properly. In case of damage, contact our after sales support centre.
- **Read all instructions** in this manual and make sure you understand all warnings. To familiarise yourself with all the parts and operating principles of the coffee grinder, please refer to the Product Overview and Getting Started sections. Also pay attention to the safety instructions on the previous pages.
- **Remove and wash** the plastic removable parts (coffee bean hopper and lid, ground coffee container and lid) with a soft cloth or sponge in warm, soapy water to remove any dust from transport. Rinse and dry thoroughly.
- **NOTE:** You may notice a slight stain mark on the inner burr in the grinding chamber. This is normal and due to factory's coffee grinding test during the production process. It is unavoidable, and no cause for concern.

Installing and removing the removable parts

Removing the hopper

1. Make sure the machine is unplugged.
2. Press down the RELEASE button to unlock the hopper.
3. With one hand, turn the bean hopper anticlockwise until the unlock  icon is aligned with the [] marking on the grind selector ring.
4. Lift the bean hopper upwards and remove it from the grinder.

Mounting the hopper

1. Make sure the machine is unplugged.
2. Check and ensure the top part of the conical burr is clear of ground coffee residues. If not, use the brush provided to clean around the top part of the burr.
3. Align the unlock  icon on the base of the bean hopper with the [] marking on the grind selector ring.
4. Press down and turn the hopper clockwise until the lock  icon is aligned with the [] marking and the hopper clicks securely in place.

Getting Started (Cont.)

Positioning the ground coffee container

1. Make sure the machine is unplugged.
2. Attach the lid to the ground coffee container before putting it in place on the bottom plate.

IMPORTANT! The coffee grinder will not turn on ...

- ... if the coffee bean hopper is not properly mounted.
- ... if the lid is not properly attached to the ground coffee container.

Grind selection

Your coffee grinder has 39 grind size options. To adjust the grind size, rotate the grind selector ring and adjust from fine to coarse depending on the type of coffee you are brewing.

Brewing method	Espresso	Pour-over / drip-filter	Plunger / cold brew
Suggested grind size	Fine	Medium	Coarse
Grind setting	Fine – 12	12 – 26	26 – Coarse

NOTE: Avoid adjusting the grind size during operation as it will affect the coffee ground coarseness.

Coffee quantity



Set the cup dial (see Fig. 1 on the opposite page) to the number of cups for which you want your coffee ground. After the appropriate amount of coffee has been ground, the machine will stop grinding.

Hints for grinding coffee

- Only buy as much coffee as you will use within a week after opening. Fresh coffee tastes best.
- To retain optimum freshness, store the coffee beans in an airtight container in a cool, dark area. Do not store coffee in a refrigerator or freezer.
- Grind the coffee beans just before brewing, and only grind as much as you will need.

Instructions

Using the coffee grinder

1. Place the coffee grinder on a flat, level surface.
2. Fit the ground coffee container with its lid in its correct position on the bottom plate. Check and ensure that the assembly is correctly positioned.
3. Check and ensure that the coffee bean hopper is correctly positioned – the lock  icon should be aligned with the [] marking.
4. Open the lid of the coffee bean hopper and fill the hopper with the desired quantity of whole coffee beans. Close the lid.
5. Adjust the coffee grind size to your requirements (see "Grind selection" on the opposite page and Fig. 1, below).
6. Plug the power plug into an appropriate power outlet and switch on power to the outlet. The grinder will emit a short beep, indicating that power is supplied.
7. Rotate the cup dial and select the number of cups: 2, 4, 6, 8, 10 or 12 (Fig. 1).
8. Press the START/STOP  button to start grinding.
9. The machine will stop automatically and a buzzer will sound when enough coffee has been ground for the number of cups selected.



- NOTE:** The amount of ground coffee per cup will vary depending on the type of coffee used. (Average weight is approximately 8.25g per cup based on grind setting 19. The coarser the setting, the more coffee will be ground.)
10. Unplug the power cord from the power outlet.
 11. Before lifting the ground coffee container off the bottom plate, gently tap at the sides of the container and chute to ensure that all of the ground coffee has dropped into the container.

IMPORTANT!


- **Maximum operating times:** Do not use the coffee grinder continuously for more than five (5) minutes at a time as the motor could overheat and cause damage to the appliance. Allow the appliance to rest until the motor has cooled down.
- **Stopping:** If for any reason you need to stop the grinder during operation, press the START/STOP button.

FAQs and Troubleshooting Guide

The machine doesn't work although it is properly connected to the power supply.

Check and ensure that both the coffee bean hopper, ground coffee container and their lids are correctly in place. The machine will not start if these parts are incorrectly positioned.

The machine has stopped grinding although there are still some beans left in the bean hopper.

The machine may have ground enough coffee for the number of cups selected. To grind more coffee, press the START/STOP  button again. If the machine does not grind any more coffee, gently tap the chute to loosen any blockages, then retry.

I don't drink coffee every day. How long can I store it?

Coffee starts losing its freshness almost immediately after roasting, so try to buy your beans in smaller batches. Grinding your own coffee is best, but only grind as much as you will need at any time, as coffee turns stale relatively quickly after it is ground. Properly stored (see below), coffee beans should retain their flavour for around two to four weeks.

What is the best way to store coffee?

Coffee (beans or ground) should be stored in an opaque, airtight container in a cool, dark area, such as in a pantry. Avoid any areas where the coffee is exposed to direct sunlight, heat or moisture. Don't store coffee in a refrigerator or freezer, as it will absorb the moisture from the air around it, which will spoil its taste. Vacuum sealing ground coffee will extend its shelf life, and it will enable freezing, if required.

Does it really matter how finely I ground my coffee beans?

Yes. Too coarsely ground beans will result in under-extracted coffee, which is weaker and less flavoursome. If your grind is too fine, the coffee may get over-extracted, which gives it a bitter taste, or it may clog your filter and lead to possible overflow in an espresso machine.

What is the right grind size for my coffee?

The size of your grind depends on the type of coffee you are making.

- **For strong and intense types of coffee** (such as Italian espresso or Turkish coffee) made in an espresso machine or similar, the beans should be finely ground until they have the consistency of salt. If the grind feels like sugar, it's too coarse; if it feels like flour, it's too fine.
- **For lighter, fresher styles of coffee** (such as percolator, plunger, drip-filter or pour-over coffee), grind the beans to a medium or coarse consistency.

Other Useful Information

Cleaning and care

WARNING!

- Before cleaning the coffee grinder or removing parts, ensure the appliance is disconnected from the power supply.
- DO NOT immerse the motor base or cord in water or other liquid for cleaning.
- DO NOT use alkaline, abrasive or harsh cleaning agents.
- DO NOT wash any part of the appliance in the dishwasher.

Coffee bean hopper and ground coffee container


- Wash the two plastic containers and lids in warm water and a mild detergent. Rinse and dry thoroughly before reuse.

Base

- Clean the base of the appliance and all external surfaces with a damp cloth only, then wipe it dry with a soft, dry cloth.
- Never immerse the base or power supply cord in water or other liquid.

Grinding chamber

- Dust off excess coffee grounds from around the grinding chamber every day. Failing to remove coffee residues could result in it becoming stale and tainting the next lot of coffee you grind. **Never use water to clean the grinding chamber!**
- Make sure the appliance is disconnected from the power supply.
- Remove the coffee bean hopper.
- Grip the small metal handle of the outer burr, turn it anticlockwise and lift it out of the grinding chamber. Leave the inner burr in place.
- Clean the burrs and chute using the supplied cleaning brush, or a dry pastry brush (Fig. 2).

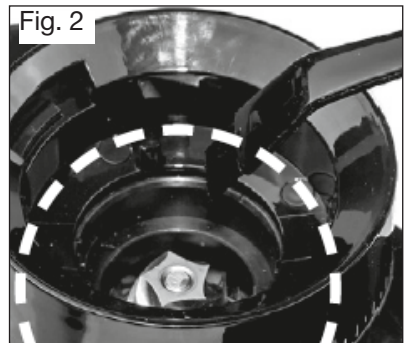

Storage

When the appliance is not in use, store it in a clean and dry place, out of children's reach. Store it in the original carton to protect it from dust.

Other Useful Information (Cont.)

Service, repair and spare parts

- If your coffee grinder fails to work as expected, or you experience problems that you cannot solve, please contact our after sales support centre for advice on repair or replacement. The unit contains no user-serviceable parts inside, and no spare parts are available for purchase.
- Do not attempt to repair, disassemble or modify the appliance yourself. Doing so will expose you to considerable danger and will void your warranty.

Technical specifications

Power	160W, 220–240V ~, 50–60Hz	
Max. continuous operation time	5 minutes	
Bean hopper capacity	Max. 375g coffee beans	
Ground coffee container capacity	Max. 200g ground coffee	
Dimensions (approx.)	Height (fully assembled)	350mm
	Width	135mm
	Length	230mm
Weight (approx.)	2.17kg	

Compliance

This appliance has been fully tested and meets all requirements as set out by standards AS/NZS 60335.1 and AS/NZS 60335.2.14.



CLASS II - DOUBLE INSULATED APPLIANCE

This symbol indicates that the appliance has been designed in such a way that it does not require a safety connection to electrical earth (ground).



E209

The RCM Mark (Regulatory Compliance Mark) indicates that the product complies with the relevant guidelines of the ACMA as well as corresponding government requirements for the safety of electrical devices.

Responsible disposal

At the end of its working life, do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.



STIRLING[®]

Designer Collection

Burr Coffee Grinder

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost. **We recommend you save this data elsewhere prior to sending the product for repair.**

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 886 649 or write to us at:

Tempo (Aust) Pty Ltd ABN 70 106 100 252
PO BOX 6056 Frenchs Forest, Sydney, Australia NSW 2086
Tempo Help Desk: 1300 886 649 (Aust)
(Operating Hours: Mon-Sat 09:00am to 06:00pm AEST)
Email: info@tempo.org





Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on 1300 886 649 for advice.

For an electronic copy of this manual, please go to www.stirlingappliances.com.au and download a copy, or contact our after sales support centre.

Instruction Manual Revision Index

Version No	Issue Date	Description
V1.0	26 November 2019	Original (2020) release
V1.1	03 December 2019	Minor updates, pages 1, 4, 15
V1.2	10 December 2019	Minor update, page 11