



# Quick Start Guide

Model: STR-CD50

Let's get your new clothes dryer ready to use!


## A Installing the machine

**CAUTION!** This clothes dryer is heavy – ensure you have a helper to move and install it. Move cautiously when moving the dryer. Do not attempt to lift it by grasping the door. A team lift or mechanical aid is required when moving it.

**WHERE TO INSTALL?** This clothes dryer is designed with the control panel low on the front panel so it is in easy reach when wall-mounted. If you want to wall-mount it upside down, use the extra control panel (supplied) so the printing is the right way up. The dryer is equally suitable for installation on the floor level, or mounted on a rack (not included). Comprehensive instructions for all installation options are included in the instruction manual.

**CAUTION!** Your wall must be structurally sound and sturdy enough to support the weight of the heater with a full load (40kg). If in doubt, consult a builder.

**NOTE:** Before you use the dryer for the first time, place some clean rags into the drum and run a complete cycle on the **1 Hour** program following the instructions on page 18 in the manual.

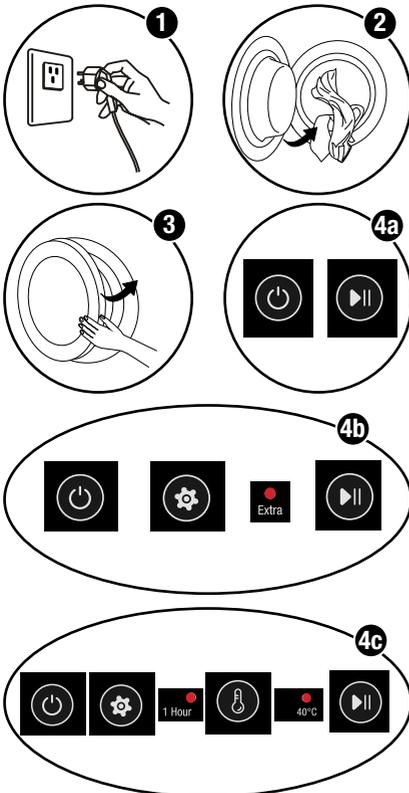

## B Preparation

Plug in the machine. **1**

Load your washing into the dryer - page 16 in the instruction manual has useful hints to help you with this. **2**

Close the door. **3**





## C Clothes Drying

For the **Smart** program, simply press the POWER button, then the START/PAUSE button. **4a**

For the **Extra** program, press the POWER button, then the PROGRAM button until the **Extra** indicator lights up, then press START/PAUSE. **4b**

For the **1 Hour** program, press the POWER button, then the PROGRAM button until the **1 Hour** indicator lights up, then press the TEMPERATURE button and select an appropriate temperature, then press START/PAUSE. **4c**

The programs are explained on the other side of this page ...

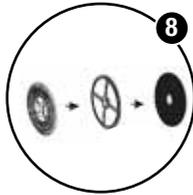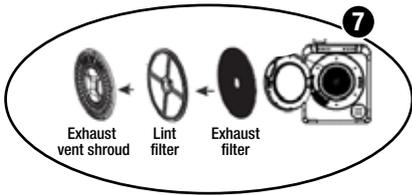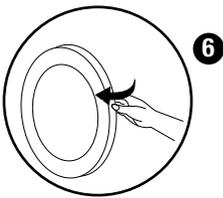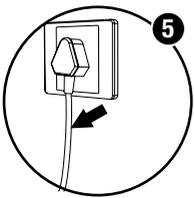

## Afterwards

# D

At the end of the drying program, when the drum has stopped rotating, unplug the machine from the power supply.

Open the door and take out your washing.

When the drum has cooled, take out the lint filter assembly, disassemble it and clean each part.

Reinstall the lint filter assembly, first the exhaust filter and then the lint filter attached to the exhaust vent shroud.

## E Control panel

The program indicators show which program is selected.


Use the PROGRAM button to select the drying program.

Use the TEMPERATURE button to select the desired drying temperature.

The temperature indicators show which temperature is selected.

Press the POWER button to turn on the dryer or to set it to standby.

Press the START/PAUSE button to start or pause the dryer.

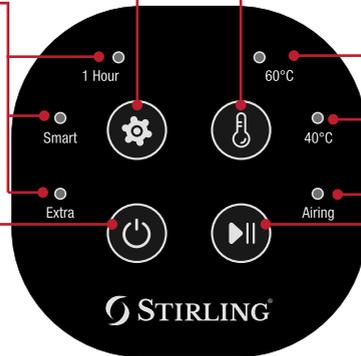

## F Programs

**Extra:** A temperature-sensing program suitable for fast drying of textiles that can withstand high heat (60°C). Maximum drying time: 150 minutes. Temperature cannot be adjusted.

**Smart:** A temperature-sensing program suitable for drying textiles at a slightly lower temperature (55°C). Maximum drying time: 150 minutes. Temperature cannot be adjusted.

**1 Hour:** This one hour program is suitable for smaller loads of clothing. The drying temperature can be set to 60°C, 40°C or Airing, which simply refreshes clothes without heat.

## Give us a call

What? You mean this Quick Start Guide didn't have ALL the answers? The manual has more comprehensive instructions, or speak to us. Call our After Sales Support on 1300 886 649.

Well done, you made it! Now sit back and relax ... your new clothes dryer is automatically covered by a 3 year warranty.