



Let's get your new top mount refrigerator ready to use!

A Installation

CAUTION! The fridge is heavy—transport it with care! To avoid back or other injury, we recommend you ask someone for help or use a mechanical aid when moving it.

1 Getting it ready for use

Before you start installing your new top mount refrigerator, wipe the interior surfaces and accessories with a well wrung out cloth moistened with lukewarm water with a little baking soda added. This will remove any dust from transit and storage and help remove the typical smell of a brand new product. Dry thoroughly.

2 Need the doors reversed?

Your new top mount refrigerator has the capability of the doors opening from the right or left side. If your set-up requires reversal of the door swing, please follow the instructions on pages 19–21 of the supplied manual.

3 Where to install

The fridge is designed for freestanding use. The floor must be strong, sturdy and level—adjust the levelling feet, if necessary. Avoid areas where the fridge would be exposed to direct sunlight, heat, extreme cold ambient temperatures or excessive moisture and high humidity. Installing it in the coolest area of the room will save energy consumption and running costs. Allow at least 10 cm clear space at the back and 5 cm at the sides so air can circulate freely around the fridge. For comprehensive installation instructions, please consult the manual.

B Setting up

Setting


Before plugging in your new fridge, let it stand upright for at least 4 hours to allow the refrigerant gases to settle into the compressor.

Power connection

Plug in the fridge and secure the power supply cord behind the unit, making sure the plug is accessible after installation.


First use: cool down

When first starting up, and after a period out of use, allow the unit to cool down on the coldest settings (in both compartments) for at least 2–3 hours before placing perishable food in the fridge.

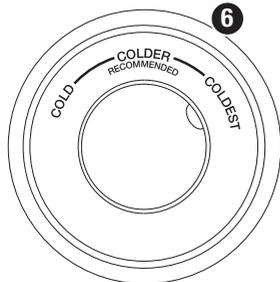

Nearly done! Just a bit more on the other side of this page...

Temperature regulation **C**

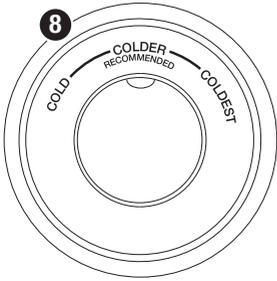

This appliance has two temperature controls, one in the freezer and one in the fridge compartment, so you can adjust the temperature separately according to the requirements of the foods stored in each compartment. The controls are located on the interior back walls of the fridge and freezer compartments.

Turn the control clockwise towards COLDEST to lower the temperature and anticlockwise towards COLD to increase the temperature in the compartment. A middle setting on COLDER should be appropriate for normal usage.

D Inside the fridge and freezer

The **freezer** compartment is equipped with a glass shelf and door balcony for convenient access and organised storage. It is suitable for freezing domestic quantities of fresh food and long-term storage (up to three months) of frozen food.

The **fridge** compartment is suitable for short-term storage of all your fresh food. The walls of the fridge are equipped with a series of runners so that you can position the glass shelves to suit your individual storage requirements.

The door balconies in the fridge compartment are suitable for storage of food and drink bottles, cans and jars. They may be placed at different heights: gradually pull a balcony up until it is free, then reposition it as required.

The easy-to-pull-out crisper drawer is covered with a glass shelf to help you keep your fruit and vegetables fresh.



E Give us a call

What? You mean this Quick Start Guide didn't have ALL the answers? The manual has more comprehensive instructions, or speak to us. Call our After Sales Support on 1300 112 534.

Well done, you made it! Now sit back and relax ... your new top mount refrigerator is automatically covered by a 3 year in home warranty.