

# Quick Start Guide

Model: STR-CD70W



Let's get your new 7 kg vented clothes dryer ready to use!

 
## A Installing the machine

**CAUTION!** This clothes dryer is extremely heavy—transport it with care! A team lift or mechanical aid is required when moving it.

**WHERE TO INSTALL?** This appliance has been designed for freestanding, floor-level installation. Make sure the floor surface is firm, flat, dry and stable, and there is an appropriate electrical wall outlet nearby. Do not place the appliance on soft material such as foam, plastic or carpet, as this may block the air intake.

**IMPORTANT!** This clothes dryer must be installed by a competent person. Installation involves removing any packaging, leveling the machine, connecting it to the included vent hose and connecting this hose to an outlet point. **For detailed installation instructions, please consult the supplied instruction manual, which also has comprehensive usage instructions and important safety advice.**

**NOTE:** Before you use the dryer for the first time, place some clean, damp rags into the drum and run a complete cycle on the **30 minutes** program following the instructions on page 16 in the manual.

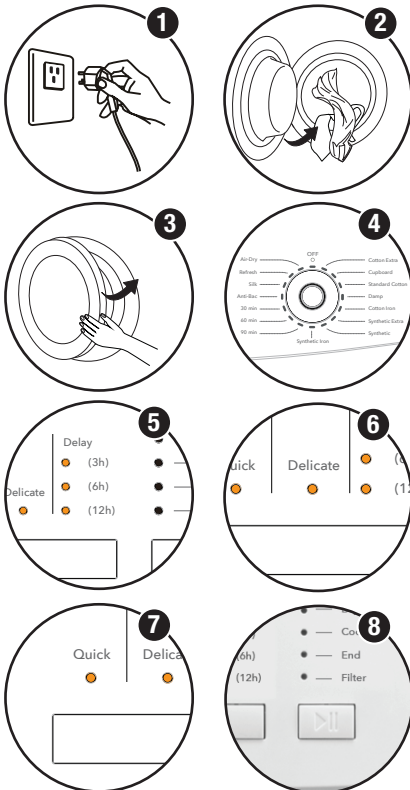

## B Preparation

1 Plug in the machine.

2 Load your washing into the dryer – you'll find useful hints on pages 17-18 in the manual.

3 Close the door.

## C Clothes drying

4 Select a drying program using the dial on the right hand side of the control panel.

5 If desired, add a delay time by pressing the DELAY button repeatedly, to cycle between the 3 hour, 6 hour and 12 hour options (see page 19 of the manual).

 
 
 
6 For some programs, a gentler dry can be achieved by pressing the DELICATE button (see page 20 of the manual for a list of these programs).

7 Alternatively, for some programs, a faster dry can be achieved by pressing the QUICK button (see page 20 of the manual for a list of these programs).

8 Press the START/PAUSE button to start the drying program, or to pause and restart it during operation.

**CAUTION:** When pausing the dryer and opening the door, beware of hot surfaces and hot steam escaping. Take utmost care to avoid scalding.

The programs are explained on the other side of this page ...

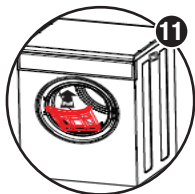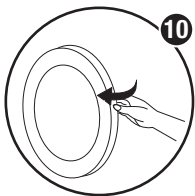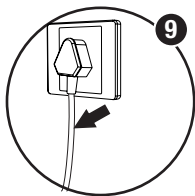

## Afterwards

**D**

At the end of the drying program, when the drum has stopped rotating, unplug the machine from the power supply.

**9**

Open the door and take out your washing.

**10**

When the drum has cooled, take the lint filter out of the door opening and wipe or brush it clean.

**11**

When it is completely dry, refit the lint filter into the door opening.

**12**

## E Drying programs

Program	Max. Weight	Type of Textiles
Cotton Extra	7.0 kg	Bathrobes and towels, cotton clothing or textiles, jeans and other suitable items; larger quantities or bulkier items that can withstand high heat.
Cupboard	7.0 kg	Bathrobes and towels, cotton clothing or textiles, jeans and other suitable items.
Standard Cotton	7.0 kg	Cotton clothing or textiles, jeans and other suitable items.
Damp	7.0 kg	Knitted items and cotton clothes.
Cotton Iron	7.0 kg	Cotton sheets, linen, and starched laundry.
Synthetic Extra	3.0 kg	Synthetic sheets and linen.
Synthetic	3.0 kg	Textiles made of synthetic fibres.
Synthetic Iron	3.0 kg	Knitted items and other synthetic clothing.
30 min, 60 min, 90 min	7.0 kg	A manual drying program which allows you to set the drying time – recommended for thick or multi-layered textiles. The default drying time is 30 minutes, which can be extended in 30 minute steps.
Anti-Bac	4.0 kg	Certain types of undergarments and winter clothing.
Silk	1.5 kg	Silk items.
Refresh	3.0 kg	For refreshing everyday clothing, such as shirts and certain types of undergarments.
Air-Dry	7.0 kg	For refreshing or gently drying textiles.



## Give us a call

What? You mean this Quick Start Guide didn't have ALL the answers? The manual has more comprehensive instructions, or speak to us. Call our After Sales Support on 1300 112 534.

Well done, you made it! Now sit back and relax ... your new 7 kg vented clothes dryer is automatically covered by a 3 year warranty.