

Let's get your new 8 kg washing machine ready to use!

 
 
 
 
## A Installing the machine

**CAUTION!** This washing machine is extremely heavy – transport it with care! A team lift or mechanical aid is required when moving it.

**IMPORTANT!** Before installing the washing machine, you must remove the transport bolts from the back of the housing and cover the holes with the transport hole caps provided. The four bolts hold the drum in place during transport but they must be removed before use so the drum can move during the wash and spin cycles.

This washing machine must be installed by a competent person. Installation involves removing the transport bolts, levelling the machine, connecting it to your cold water supply and installing the drain hose. **For detailed installation instructions, please consult the supplied instruction manual, which also has comprehensive usage instructions and important safety advice.**

**NOTE:** Make sure the washing machine is properly and securely installed. Before using the washing machine for washing clothes, run a complete washing cycle without clothes, using the drum **clean program**.

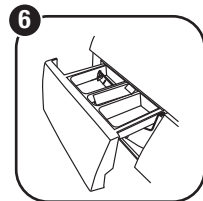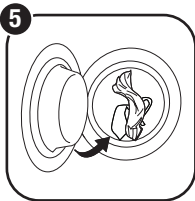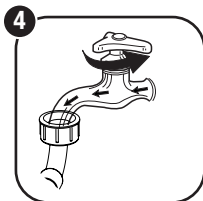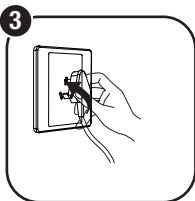

## B Preparing a wash

Before washing a load, plug in the machine and open your water tap.

Load your washing into the machine - page 24 in the instruction manual has useful hints to help you with this.

Close the door and add detergent to the drawer – find all the details on page 23 in the instruction manual.

## C Control panel operation

Rotate the **program dial** to switch on the machine, select a program and switch the machine off at the end.

The **display screen** shows the settings, time remaining, options, codes, etc.

 
Press the **Speed** button to change a program's default spin speed (if available).

Press the **Delay Start** button to set the delay start time (from 1 to 24 hours).




Press the **Start/Pause** button to start a wash program or to pause it.

Press the **Speed** and **Delay** buttons at the same time and hold for three seconds to set/cancel the child lock.

Press the **Delay** and **Start/Pause** buttons at the same time to activate (reset) the Wi-Fi module.

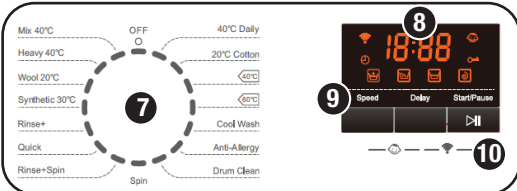

   Turn over the page for details about the wash programs ...

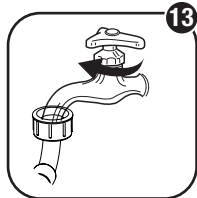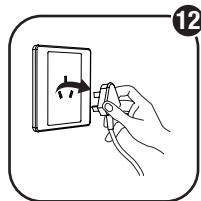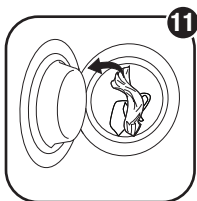

## Afterwards

**D**

When the buzzer sounds you can open the door and take your washing out of the machine. The machine will automatically change into stand-by mode after 10 minutes of inactivity. Turn the dial back to the [ O ] position.

Unplug the power plug.

Close the water tap.

We recommend you leave the door slightly ajar so the drum can dry properly and to prevent mould and odour development.

## E Wash programs

Program	Max. Load (kg)	Time (hr:min) (A)	Temp. (°C) (B)	Rinse Times	Spin Speed (rpm)
40°C Daily	8	1:20	40	2	0/400/600/800/1000/1200
20°C Cotton	8	1:14	20	2	0/400/600/800/1000/1200
40°C (C)	8	3:17	40	3	0/400/600/800/1000/1200
60°C (C)	8	3:10	60	3	0/400/600/800/1000/1200
Cool Wash	6	0:57	Cold	2	0/400/600/800/1000/1200
Anti-Allergy	4.5	2:11	90	2	0/400/600/800/1000
Drum Clean	0	1:14	60	2	600
Spin	8	0:11	—	0	0/400/600/800/1000/1200
Rinse+Spin	8	0:16	—	1	0/400/600/800/1000/1200
Quick	2.5	0:18	Cold	2	0/400/600/800/1000/1200
Rinse+	8	1:34	Cold	4	0/400/600/800/1000/1200
Synthetic 30°C	4	0:55	30	2	0/400/600/800
Wool 20°C	3	0:50	20	2	0/400/600
Heavy 40°C	8	1:39	40	3	0/400/600/800/1000/1200
Mix 40°C	4.5	1:03	40	3	0/400/600/800/1000/1200

(A) Default times for reference purposes only.

(B) Default temperatures may differ slightly (+/-10°C).

(C) The most energy and water efficient programs, suitable for cleaning normally soiled cotton laundry.



## Give us a call

What? You mean this Quick Start Guide didn't have ALL the answers? The manual has more comprehensive instructions, or speak to us. Call our After Sales Support on 1300 112 534.

Well done, you made it! Now sit back and relax ... your new 8 kg front load washing machine with Wi-Fi function is automatically covered by a 3 year warranty.