



Aroma Diffuser

**Model Number
AD90G (Moonbeam) / AD90B (Black Beauty)**

INSTRUCTION MANUAL

AFTER SALES SUPPORT

AUS 1300 112 534

tempo.org/support

MODEL: AD90G/AD90B PRODUCT CODE: 708475 03/2022



Welcome

Congratulations on choosing to buy a STIRLING® product.

All products brought to you by STIRLING® are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty.

We hope you will enjoy using your purchase for many years to come.

Contents

- 02 Welcome**
- 04 Warranty Details**
- 05 General Safety Instructions**
- 08 Getting Started**
- 09 Product Overview**
- 10 Instructions**
- 12 FAQs & Troubleshooting Guide**
- 13 Other Useful Information**
- 15 Repair and Refurbished Goods or Parts Notice**



Aroma Diffuser

Warranty Details

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/ TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and to compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



General Safety Instructions

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Keep the manual in a safe place for future reference, along with the completed warranty card, purchase receipt and carton. If applicable, pass these instructions on to the next owner of the appliance. Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

Electrical safety and cord handling

- **Voltage:** The appliance must only be supplied at a safe low voltage (DC 5 V) from a power source via the supplied USB cable.
- **Water and moisture:** Do not submerge the appliance in water or other liquid. Make sure water does not reach the external parts of the appliance.

Do not use it near water, in a swimming pool, in a bathroom, in a laundry room, outdoors when raining or at any other locations with high humidity levels. Do not touch the power supply (USB) cable with wet hands. In case of a water leak, or if water spills onto the appliance (other than in the water tank) immediately disconnect it from the USB cable and let it dry for at least 24 hours.

- **Protect the USB cable:**
 - Do not use the appliance with the cable coiled up; always fully unwind.
 - Do not twist the cable or let it touch heated surfaces or sharp edges.
 - Do not allow the cable to hang over the edge of a table, desk or bench.
 - Never pull or carry the diffuser by the USB cable.
- **Damage:** Check the USB cable regularly for visible damage. If the cable is damaged, do not use it to operate the aroma diffuser.
- **WARNING!** Do not pick up or operate the appliance if the USB cable, USB port or housing is damaged, after it malfunctions, or has been dropped or damaged in any manner. In case of damage, contact your local store or our after sales support centre for advice.
- **Disconnection:** This appliance can only be switched off completely when disconnected from the power supply. Turn off the unit first and then disconnect the USB cable when it is not in use and before assembling/disassembling parts, filling the water reservoir, cleaning, maintenance, or storage, and when moving the appliance. Do not move or lift the appliance while it is still connected to a USB port. Grip by the USB connector when disconnecting, do not pull the cable.

General Safety Instructions (Cont.)

Usage conditions and restrictions

- **Domestic use only:** This appliance is intended for private domestic use only. It is not suitable for commercial or industrial use.
- **Intended purpose:** Do not use the appliance for any other purpose and only use it as described in this manual. Any other use is not recommended and may cause fire, electric shock or injury.
- **Usage restriction:** The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Children:** Supervise children to ensure they do not play with the appliance. Close supervision is necessary when any appliance is used by or near children.
- **WARNING! Do not leave unattended during use!** Always switch the appliance off and unplug it from the power source when it is not in use, if left unattended, and before cleaning and storing.
- **Usage position:** Place the appliance upright on a dry, flat stable surface to reduce the risk of it tipping over. Do not turn it upside down; it will disrupt functionality.
- **Do not tilt:** The appliance will work correctly when placed on a smooth horizontal surface. Tilting it may cause a water leak and damage the appliance. Always keep it upright for use and storage.
- **Do NOT use the appliance in the following areas/circumstances:**
 - In or near an open window where rain may enter the product.
 - In passageways or any other location from where it can be accidentally knocked over.
 - In the immediate vicinity of water, such as near a bathtub, washbowl, swimming pool, etc., where the likelihood of immersion or splashing could occur.
 - Near an open flame, a heater, hot burner, oven or other source of high heat, near electrical equipment or in direct sunlight.
- **Water usage:** For personal safety and proper functionality of the appliance use only clean, untainted tap water. If the source of the water is polluted and you are not sure about its safety, please use distilled water. It is recommended to perform the cleaning of the appliance according to page 13 of this user manual, under the “Care and cleaning” section.
- **Vaporizing medium:** The appliance is only to be used with the recommended vaporizing medium. The use of other substances may give rise to a toxic or fire risk.

General Safety Instructions (Cont.)

- **Filling:** Always unplug the appliance from the power source when filling or cleaning the water tank. Use the funnel to fill the tank with fresh tap water, do not overfill. Refit the top cover before use. Please refer to page 10 for comprehensive filling instructions.
- **After use:** If you do not plan to use the appliance for a long time, empty and dry the water tank.
- **Before storage,** please thoroughly dry the water tank inside the unit.
- **Moving the appliance:** Do not carry the appliance when it is filled with water.
- **Cleaning:** Ensure that the appliance is switched off and disconnected from the power source. Release any residual water from the reservoir following the cleaning instructions on page 13. Wipe the housing with a damp cloth, then dry with a dry cloth. Do not wash the unit directly or immerse any part in water or other liquid. Do not use any solvents, abrasive products or alcohol based cleaning agents on any surface. Using such harsh cleansers will scratch or damage the surface, or can lead to deformation of the housing. Please refer to page 13 for filter cleaning instructions.
- **Do not cover:** Do not cover the diffuser or obstruct the hole or inlet/outlet grilles. Obstructing these openings causes a fire hazard, reduces the operating efficiency and may lead to malfunction or damage.
- **Keep it clear:** Do not place heavy items on top of the appliance. Do not allow any foreign objects inside the appliance. Do not place open fire sources (candles, etc.) on top of the appliance.
- **CAUTION! Personal safety:** Never insert fingers, pencils or any other objects into the hole or grilles when the diffuser is connected to a power source, and make sure to warn children of the dangers.
- **Misuse:** Improper placement or misuse of the appliance may result in the risk of fire, electric shock and/or injury. We accept no responsibility for any eventual damages or personal injury caused by improper placement, misuse of the product and/or failure to follow these instructions.
- **WARNING! Essential oils:** Do not use any extracts that you are allergic or sensitive to. Many essential oils are toxic or potentially fatal to pets. Some are unsafe for use around children, or pregnant and breastfeeding women. Be careful not to get any essential oils directly on your skin - they can be abrasive when undiluted. Check with your health care provider if you are in any doubt as to this product's suitability for you. If you or someone else has a negative reaction to an essential oil, seek medical assistance immediately.

Getting Started

Before first use

Unpacking

This diffuser has been packaged to protect it against transportation damage. Unpack the appliance and keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use the carton to store the diffuser when it is not in use. In the event that the packaging materials are to be disposed of, please recycle them where possible.

Safe packaging disposal

Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.

Check USB cable


Unwind the USB cable to its full length and inspect it for damage. Do not use the appliance if the appliance or cable has been damaged or is not working properly. In case of damage, contact our after sales support centre for advice on examination, repair or return of the damaged product.

Read instructions

Make sure you have read and understood all instructions and warnings in this manual. Refer to the Product Overview, page 8, to familiarise yourself with the product and identify all parts. Pay particular attention to the safety instructions on the previous pages.

Product Overview

Scope of delivery

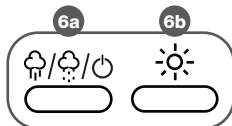


Aroma Diffuser

- 1 Outlet
- 2 Outlet cover
- 3 Tank cover
- 4 Water stopper
- 5 Water tank (75 mL max., 25 mL min.)
- 6 Controls:
 - a Diffuse/power button
 - b Light button
- 7 Base
- 8 USB port (opposite side of device - not shown)
- 9 USB charging cable (not shown)

Documentation (not shown)

Instruction manual
Quick start guide
Warranty certificate


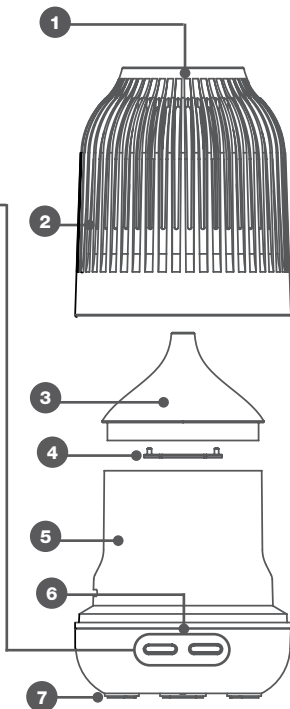


NOTE: Due to continued product improvement, images and illustrations in this manual may vary slightly from the product purchased. All images in this manual are for reference purposes only. They are not necessarily pictured to scale.

Instructions

Using this device

1. Lift and remove the outlet cover (Fig. 1a).
2. Lift and remove the tank cover. (Fig. 1b)
3. Pour fresh, clean water into the tank, ensuring that the level is not higher than the "MAX" (75 mL) mark, and no lower than the "MIN" (25 mL) mark inside the tank (Fig. 1c)
4. If desired, add 3-4 drops of essential oils into the full water tank (see page 11 for suggestions).
5. Replace the tank cover and then the outlet cover. The device will not function if these covers are not in place.
6. Insert the USB power cable into the port and power supply (see electric safety information on page 5).
7. Short press the diffuse button (Fig. 2a) to switch on/off the diffuser. The continuous spray function will automatically start after switching on.
8. Long press the diffuse button (3 seconds) to switch between continuous and intermittent spray. The blue light will blink three times to indicate the spray mode shift.

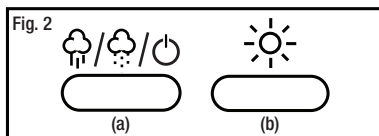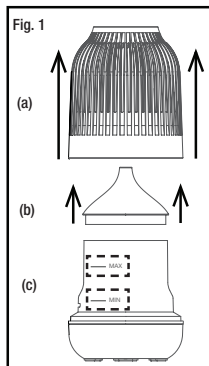

9. To switch on the 7-colour changing mood light, press the light button (Fig. 2b) once.
10. To stop the mood light on a certain colour, press the button again while that colour is illuminated.
11. To turn off the mood light, press this button again.

NOTE: The diffuser has an auto power-off function that will engage if the water tank is empty. It may take a second for the diffuser to switch off once this had occurred.

12. Once the device is switched off, disconnect the USB cable.
13. Pour out any remaining water. Dry the device with a soft cloth, or leave it upside down to dry out. Do not submerge in water.

NOTE: We recommend cleaning the device after every use (see page 13 for more information).

Instructions (Cont.)

Essential Oils Guide

Essential oils are extracts from plants, and are commonly used in aromatherapy, where they are believed to have a myriad of health benefits. When used in a diffuser, these oils are diluted (for 75 mL of water, about 3-4 drops should be sufficient) and the water is then diffused and gradually released into the air.

However, there are some important things to consider before using essential oils in your diffuser, as **some people have allergies or sensitivities to certain extracts**. Many essential oils are **toxic or potentially fatal to pets**, or are unsafe for use around **children, or pregnant/breastfeeding women**.

In addition, **be careful not to get any essential oils directly on your skin** - they can be abrasive when undiluted. Check with your health care provider if you are in any doubt as to this product's suitability. **If you or someone else has a negative reaction to an essential oil, seek medical assistance immediately.**

This table outlines some of the benefits claimed to be associated with the following essential oils:

Essential oil	Scent	Benefits
Bergamot	Sweet, citrus, spicy	<i>Reducing inflammation, improving mood</i>
Cinnamon	Spicy, sweet, woody	<i>Increasing focus</i>
Chamomile	Sweet, herbal, refreshing	<i>Calming, better sleep</i>
Clove bud	Fruity, spicy, sweet	<i>Antimicrobial, pain relief</i>
Eucalyptus	Minty, camphorous, sharp	<i>Antibacterial, decongesting</i>
Jasmine	Sweet, rich, green	<i>Relaxing, calming</i>
Lavender	Floral, sweet, herbal	<i>Calming, soothing</i>
Lemon	Citrus, clean, fresh	<i>Reducing inflammation, invigorating</i>
Lemongrass	Fresh, sharp, grassy	<i>Refreshing, antibacterial</i>
Rosemary	Herbal, woody, energising	<i>Increasing focus and concentration</i>
Sandalwood	Deep, woody, earthy	<i>Improving mood</i>
Tea tree	Strong, fresh, medicinal	<i>Purifying, cleansing</i>

FAQs and Troubleshooting Guide

If you experience problems with your diffuser, check in the table below for solutions to common problems. If the problem persists after checking the suggested solutions, please contact our after sales support centre for advice.

Problem	Possible Cause	Solution
Unable to power on	No power supply	Check the power bank/source
	Poor contact with the cable	Check the USB cable connection
No mist	The water level is too low	Fill up the tank so the water level is above the "MIN" marking
	The water level is too high	Pour out excess water so that the water level is below the "MAX" marking
	The outlet cover is not on the diffuser	Ensure the outlet cover is placed correctly on the diffuser
Low mist	The water level is too high	Pour out excess water so that the water level is below the "MAX" marking
	The ultrasonic plate is blocked	Clean the plate with a cotton swab

Other Useful Information

Care and cleaning

Regular cleaning is a prerequisite for hygienic and fault free operation.

- Before cleaning, ensure the diffuser is switched off and is disconnected from the power source.
- Clean the diffuser after every use, or at least once a week.
- Use a soft and slightly damp cloth to clean the cover and the inside of the water tank.
- Clean the ultrasonic vibration plate at the bottom of the water tank with a cotton swab.
- Never use corrosive or solvent-based cleaning products.

Storage

- After use, wait for the device to cool.
- Wipe the device clean with a damp cloth. Dry thoroughly.
- Store the device in the original box to keep dust accumulation to a minimum. Store the box in a cool, dry place, away from direct sunlight.
- Please ensure the battery is at least partially charged as prolonged storage of an empty battery may damage the battery.

Repair, service and spare parts

The unit has no user-serviceable parts contained within, and there are no spare parts available that you need to replenish.

Do not attempt to repair, disassemble or modify the appliance. Trying to repair the appliance yourself, undertaking incorrect repairs or making any modifications to the appliance or the power cord will expose you to considerable danger and will void your warranty.

In case of a malfunction or if in doubt about the diffuser's performance, please contact our after sales support centre for advice on examination of the product, service or repair on 1300 112 534 or online at tempo.org/support.

Other Useful Information (Cont.)

Technical specifications

Model number	AD90B/AD90G
Power Supply	5 V $\overline{---}$ 1 A, 5 W
Working time (approx.)	3-5 hours
Tank capacity	75 mL
Mist capacity	Up to 23 mL/hr
Dimensions	96 (Ø) x 144 (H) (mm)
Weight	220 g (approx.)

Compliance

This product has been fully tested and meets all requirements as set out by standards AS/NZS 60335.1 and AS/NZS 60335.2.101.



The RCM Mark (Regulatory Compliance Mark) indicates that the product complies with the relevant guidelines of the ACMA as well as corresponding government requirements for the safety of electrical devices.

Responsible disposal



At the end of its working life, do not throw this appliance out with your household waste. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling.

Contact your local authorities for advice on recycling facilities in your area. Or find recycling scheme services listed on Planet Ark's website at www.recyclingnearyou.com.au, or call Planet Ark on 1300 733 712.



Aroma Diffuser

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost. We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 112 534 or write to us at:

Tempo (Aust) Pty Ltd (ABN 70 106 100 252)
PO BOX 132, Frenchs Forest NSW 1640, Australia

Web Support: tempo.org/support

Tempo Help Desk: 1300 112 534 (Aust)
(Operating Hours: Mon–Sat 09:00 am to 06:00 pm AEST)



AFTER SALES SUPPORT

1300 112 534

tempo.org/support

MODEL: AD90G/AD90B PRODUCT CODE: 708475 03/2022

15



Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on 1300 112 534.

For an electronic copy of this manual, please contact our after sales support centre.

Instruction Manual Revision Index

Version No	Issue Date	Description
V1.0	8 November 2021	Original (2022) release
V1.1	23 November 2021	Minor updates, page 1, 6, 14
V1.2	10 December 2021	Minor updates, pages 10, 14