



PREMIUM GARMENT STEAMER & FABRIC SHAVER



QUICK START GUIDE

Getting Started:

This quick start guide only contains brief and basic information, please refer to the instruction manual for full instructions on how to safely use the Premium Garment Steamer and Fabric Shaver.



1. Fill the Water Tank

Using the measuring cup, measure 85ml of water. Detach the water tank from the Garment Steamer, open the plug and pour the water into the tank. Close the plug and attach the water tank to the Garment Steamer.



2. Turn On

Place the Garment Steamer on a flat, dry, heat resistant surface. Plug into a power outlet and turn on. The heating indicator light (orange light) will illuminate, indicating the Garment Steamer is on and in the process of heating up.



3. Steam

When the Garment Steamer is ready for use, the ready indicator light (green light) will illuminate. Place the steam plate against the fabric. Press and hold the steam button (⊕ button) and move the Garment Steamer in an upward and downward motion to remove the creases.



4. Turn Off and Store

When finished steaming, release the steam button (⊕ button). Switch off and unplug from the power outlet. Allow the unit to cool completely. Store the Garment Steamer in the protective pouch.

NOTE: Do not overfill the water tank as this will affect the operation of the Garment Steamer.

WARNING: Never use the Garment Steamer without water in the water tank. Do not remove the water tank when the Garment Steamer is in operation.

NOTE: The Garment Steamer will take approximately 25-30 seconds to heat up.

WARNING: Steam can scald. Take care to avoid contact with any steam emitted from the Garment Steamer when in use. Keep all body parts, including hands and feet away from escaping steam. Never turn the Garment Steamer upside down when it is in use.



1. Charge

Place the Fabric Shaver on a flat, dry, stable surface. Connect the USB cable to the Fabric Shaver. When the ⊕ button illuminates green, the Fabric Shaver is ready for use.



2. Power On and Shave

Place the garment on a flat, dry, stable surface. Remove the magnetic cover. Press the ⊕ button to turn the Fabric Shaver on. Using light pressure, circle the area intended for maintenance.



3. Power Off

When finished, press the ⊖ button to turn the Fabric Shaver off.



4. Clean and Store

Refer to page 19 for the full instructions on how to clean the Fabric Shaver. Store the Fabric Shaver in the protective pouch.

WARNING: Take care when removing the mesh blade cover as the razor blades on the blade attachment are extremely sharp!

CAUTION: Do not attempt to operate the Fabric Shaver without the mesh blade cover and lint catcher correctly and securely attached.

NOTE: The Fabric Shaver will take approximately 3-4 hours to fully charge.

NOTE: Only clean the lint catcher, mesh blade cover and blade attachment with the cleaning brush provided. Never immerse these parts in water or any other liquid.

Model	IA3744
Colours	Northern Droplet, Niagara Mist
Warranty	1 Year
After Sales Support	1300 777 137

